MičRadar

24GMilimeter wave Bio-sensing radar

R24AFD1-Static Resident Doodle ZigBee Application Manual

Please read the product instructions carefully before use and keep them properly V1.0 $\,$

MicRadar Technology (Shenzhen) Co., LTD



Contents

Steps of equipment distribution network routine: Introduction to the APP panel interface	
Introduction to application scenarios and functions of	
Detailed description of main functions of stationary parking detection radar Historical version update instructions	



1.Device distribution routine steps:

(The prerequisite for using Tuya zigbee radar equipment: Tuya zigbee

gateway is required)

1 、 Download through the app store: Tuya Smart APP



2 Click the "red plus sign" in the upper right corner to enter the product category selection page (Figure 2)

15:03 🕇	ill 🕈 🕞	15:04 🕇			ıll 🕈 🗉
帆测试 ▼	Ð	<	Add I	Device	@ ;
ll Devices	***	Sensors		Gateway	
人体存在传感	CB3S呼吸心率 Offline	Large Home Ap			
•	A	Small Home Appliances	Wireless Gateway (Zigbee)	Gateway (Zigbee)	Smart Gate Pro (Zigbee
CB3S_人体跌… ^{ffline}	人体存在雷达-Z Offline	Kitchen Appliances			
0	0	Exercise & Health	Multi-function Gateway (Zigbee)	Wireless Gateway (BLE)	Wired&wire Gatewa (BLE)
)cean-zigbee	YZXI鹊起 RG	Camera & Lock		1.1	C
fline		Gateway Control	Multi-function Gateway (BLE)	Socket Gateway (BLE)	Multimoo Gatewa (BLE+Zigb
	• *	Outdoor Travel			
E鸟智能网关	人体存在传感	Energy	Gateway		
0	0	Entertainm ent		Router	
、体跌倒设备Y	人体存在传感	Industry & Agriculture	1_1		
		Others	Router		
Home Scene	Smart Me			Parts	
Home Scene	smart Me		-		
	uro J		Figur	_	

Figure 2

Figure 3


3、Select the "wired gateway"/"wireless gateway" product in the "gateway central control" category to enter the network configuration



page , and configure the network according to the type of gateway you have . (Figure 3)

 4_{∞} Press and hold the button on the gateway until the two LED lights are always on, click Next to enter the gateway to automatically search for pairing. After pairing, follow the prompts to add a gateway to successfully configure the network.

(Note: If it is a wired gateway, the mobile phone needs to be connected to the wifi under the router connected to the gateway to connect successfully)

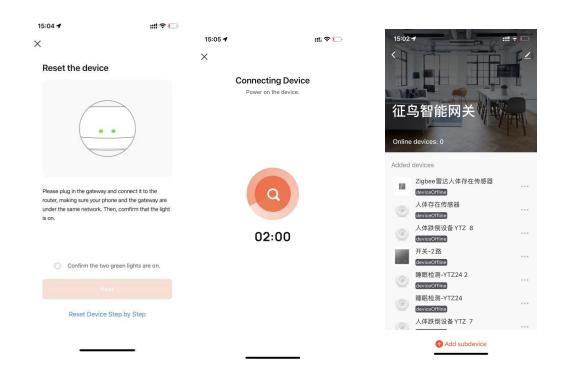


(Picture 4)

 5_{\sim} After the gateway is paired and connected successfully, you can click the gateway to enter the gateway, and click [Add Sub-device] to



add Tuya zigbee devices (Figure 5)

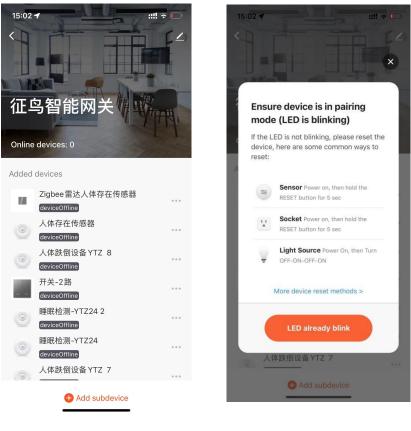

(Picture 5)

(Picture 6)

6 Press and hold the button on the radar hardware, let go after seeing the red light change from on to off, and see that the red light starts to flash. At this time, the radar enters the network distribution mode. Click [the indicator light is flashing quickly] to go to the next step. .

7. At this time, the gateway will enter the state of continuously searching for zigbee devices. After a while, the gateway can automatically search for relevant radar devices. Follow the instructions to successfully add zigbee devices.



15:05 🕇

 \times

::!! ? 🕞


Connecting Device

Power on the device.





2.APP panel interface introduction

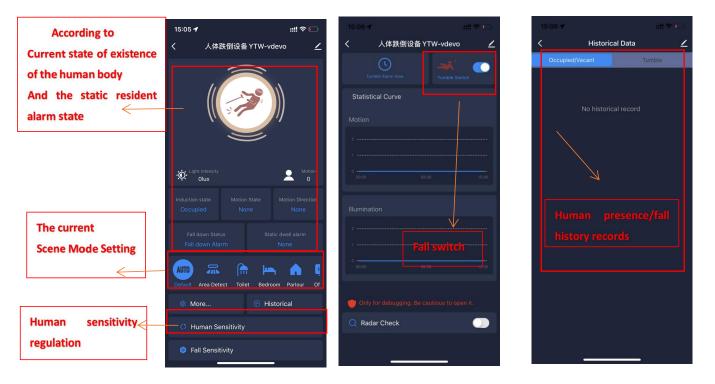

Panel main interface function setting interface log interface

3.Application Scenarios and Functions of Stationary Persistence Detection Radar

1. Restrictions on installation scenarios of stationary resident detection radar:

• Stationary Persistence Detection Radar is only suitable

for overhead installation

• Stationary resident detection radar is only suitable for

installation in toilets/kitchens and other slippery

scenarios where bumping and fainting may occur



2. The main function points of stationary parking detection radar:

Someone/Nobody Status Judgment

Active/Still/Stateless Judgment

Judgment of body movement range

Stationary park alarm

4.Detailed description of main functions of stationary parking

detection radar

Someone/Nobody Status Judgment:

• No Time Test:

When there is no one in the radar detection range, the radar will detect whether there is no human movement, breathing and other actions within the range for a period of time, and output the unmanned state when it is confirmed that there is no one. (It is normal to enter the unmanned state within 5 minutes in a normal environment)

Test with default sensitivity leave the radar detection area There are no people moving around in the environment and no interference from sources of interference start the timer	When the radar status changes from someone to still - "no one stops for a moment Recording radar into dead time In the 40 s range it means "pass"

Example test table format:

Testing frequency	scene mode	Sensitivity	into no man's time	pass
the first time	default	7	40s _	pass
time	scene			

• Trigger distance test:

When a person within the radar detection range enters the trigger, the radar will instantly display the presence status.



Switch between different scene	When the radar state changes from no one - "someone stops for a moment
modes for testing Trigger range according to different scene modes Keep approaching the radar at a	Record the distance to the radar
speed of at least 0.7m/s	means "pass"

Example test table format:

Testing frequency	scene mode	Test direction	document data (radius)	real data (radius)	pass
the first time	default scene	The long side	6m	6. 2m	pass

• Sitting distance test:

When the person within the radar detection range remains stationary, the radar will continuously display the stationary state of the person.

Test based on sensitivity "7" Facing the Radar Sit Test within the Radar Sit Detection Range 5min per test	sit still at the corresponding distance Record whether the radar can keep the occupant state after sitting for 5 minutes If it can keep the state of people
omin per test	If it can keep the state of people
	for 5 minutes, it means "pass"

Example test table format:

Testing frequency	scene mode	Sensitivity	Test direction	document data (radius)	real data (radius)	pass
the first time	default scene	7	The long side	3m	3m	pass

Active/static/stateless judgment:

• Active state test:

When the tester continuously walks or continues to make large movements in the detection area of the human presence radar, the active state will be output (the "static state" triggers the "active state" response time of about 1s)

Within the detection range of the	
selected scene mode	Radar status when in motion
Keep walking or keep making big	Can output "active" status means
moves	"passed"
Judging radar status	



Testing frequency	Whether the status is responsive	Status response time	pass
the first time	Yes	1s	pass

Static state test:

When the tester is still in the detection area of the human presence radar, or when the person just leaves the unmanned environment without entering the unmanned state, the static state will be output (the "active state" triggers the "static state" response time is about 3s)

1		,
Within the detection range of th	he	
selected scene mode		Radar status when in motion
keep still		Can output "calm" state means "pass"
Judging radar status		

Example test table format:

Testing frequency	Whether the status is responsive	Status response time	pass
the first time	Yes	3s	pass

Stateless testing: •

When the detection area is unmanned, the radar will output the unmanned state after a certain period of time judgment.

Leaving the detection range of the	
selected scene mode	
No trigger, no interference, keep	When the radar state
for a certain period of time after	Can hold "None" status means "Pass"
entering the unmanned state	
Judging radar status	

Example test table format:

Testing frequency	Whether the status is responsive	pass
the first time	Yes	pass

Judgment of body movement range :

Body Motion Amplitude Change Test: •

remains still or has a large movement in the detection area of the human body, different body movement amplitude values will be output in real time.



Within the detection range of the selected scene mode Stay still or keep making big moves Judging radar status	When stationary, the radar body motion amplitude can be displayed as "1" When moving, the radar body motion amplitude can be displayed as "2-100" means "pass"
---	--

Example test table format:

Testing frequency	the status response correct?	pass
the first time	Yes	pass

Static parking alarm status judgment:

• Static Dwell Alarm Test:

When a person is stationary for 5 minutes within the detection range of the radar stationary parking alarm, the stationary parking alarm state is reported.

	When the radar state is never -
o minutes within the range to	"Stationary Parking Alarm"
	Record radar stationary parking
	alarm successfully triggered
	If it can be triggered normally, it
	means "pass"

Example test table format:

Testing frequency	Whether the static parking alarm is normally triggered	pass
the first time	Yes	pass

• To release the stationary park alarm test:

When the stationary parking alarm has been triggered within the radar's stationary parking detection range, and the person gets up and leaves, the radar will immediately release the stationary parking alarm state and display the stationary parking state status No.

On the promise that the static	When the radar state is parked from
On the premise that the static	stationary to alarm -> none
parking alarm state has been	Recorded radar stationary parking
triggered within the range, get up	alarm successfully released
and leave to release the static	If it can be removed normally, it
parking alarm test	means "pass"

Example test table format:

Miccadar Static dwell-R24AFD1

Testing frequency	Is it normal to cancel the stationary parking alarm?	pass
the first time	Yes	pass

5. Historical version update instructions

Revision	Release Data	Summary
V1.0_0 606	2022/6/6	first draft